


How to Program Your First Remote

Marantec Synergy 200 and 300 Series Openers

Marantec operators only hold ONE remote code in their memory. Additional remotes are cloned from the programmed remote. If no remote is already programmed, follow these steps to program one remote into the operator. These instructions also appear in the operator manual. Extra remotes are added later with a New Programming Connector.

Opener Programming Buttons and LED Display

Look at the back of the garage door operator. You will see three buttons: +, –, and P, along with an LED display that shows different icons. Use these buttons and the LED display to program the remote.

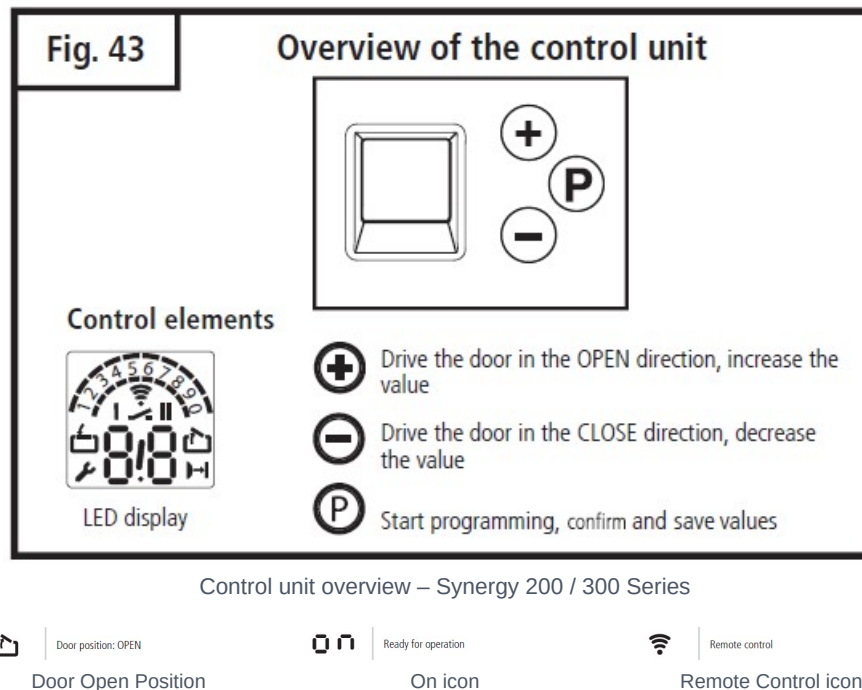

Instructions to Program a Remote

1. Press and hold the “P” button for approximately 3 seconds.
2. When the “Door Open Position” icon on the LED display illuminates, release the button.
3. You are now ready to program a remote. Press and release the “P” button until the “Remote Control” icon on the LED display is illuminated.
4. The opener can now learn the code of the remote. Press and hold the button on the remote transmitter, then release it.
5. The opener has learned the remote code. Now press and release the “P” button. This stores the code in the memory. The “On” icon should now be illuminated on the LED display and the opener is ready for operation.

These steps work for the 382, 384, and 392 Digital remotes, as well as the M3-2312, M3-2314, and M3-3313 remotes. To add more remotes, use a New Programming Connector to copy the code from the programmed remote.