How to Program Your First Remote

Marantec M4500 and M4700 Openers

These steps program one remote into a Marantec M4500 or M4700 using the red buttons on the opener powerhead (motor unit) mounted on the ceiling. Use them only when no remote is already programmed. The radio receiver stores one code. Extra remotes are copied with a New Programming Connector.

Opener Programming Buttons

Look at the underside of the operator. You will see three red buttons labeled +, –, and P. Next to them are eight circular red LED lights. Those buttons and LEDs are used during programming.

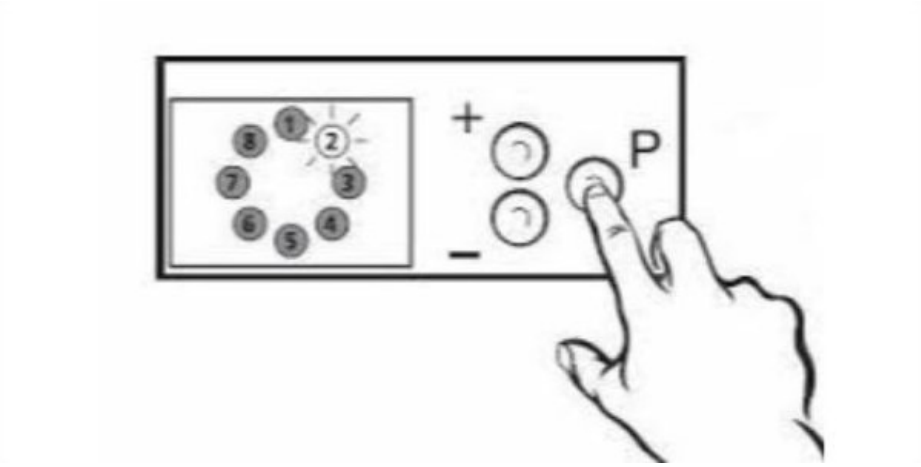


Diagram of the programming buttons on the M4500 and M4700 garage door openers.

Instructions to Program a Remote

1. Press and hold the P button for approximately 2 seconds. When all LED lights illuminate and LED #2 begins to blink, release the button. You are now ready to set or change the desired adjustment.

2. Press and release the P button until the #7 LED is illuminated.

3. LED #7 should now be blinking. The opener can now learn the code of the remote transmitter. While the #7 LED is blinking, press and hold the button on the remote transmitter.

4. When you see LED #7 flashing rapidly, release the transmitter button. The opener has now learned the code of this remote.

5. Press and release the P button. This stores the code in the memory of the radio receiver and completes the program process. The LED lights will fade out in a circular pattern, which indicates that the program mode is complete.

6. LED #8 should now be illuminated, and the opener is ready for operation.

7. Test the remote by pressing the programmed button. The operator should open or close the garage door.

Programming Additional Remotes

The steps above program one remote into the operator’s memory. To add more remotes, use a New Programming Connector to transfer the code from the programmed remote to each additional remote. Watch the short Garage Door Zone video on programming additional remotes for a walkthrough.